

ACCURA

ADVD3836

INSTRUCTION MANUAL

PLEASE READ THESE INSTRUCTIONS CAREFULLY
BEFORE OPERATING YOUR NEW PRODUCT

CALL OUR TOLL FREE HELP LINE AT 1-800-663-5954,
FROM 9AM TO 5 PM (ET) MONDAY TO FRIDAY
IF YOU HAVE ANY QUESTIONS OR PROBLEMS WITH YOUR NEW PRODUCT

JUTAN INTERNATIONAL LIMITED
TORONTO, CANADA



CD+G

* Warning

To prevent fire or shock hazard. Do not use this plug with an extension cord. Receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure to prevent fire or shock hazard. Do not expose this appliance to rain or moisture.



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

WARNING

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

* Important Safety Precautions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged. Liquid has been exposed to rain or moisture, does not operate normally or has been dropped.
- This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.

Table of Contents

Table of Discs Your DVD player Will play	2
Supporting function of disc	2
Remote Controller	3
Systems Connection	4
Chapter 1 Basic Operation	5
1. Turn On the TV and your DVD player	5
2. Place a disc	5
3. Play	5
Program Menu	6
Chapter 2 Additional Operation	7
1. Selecting Tracks (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)	7
2. Skipping Tracks (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)	7
3. Multispeed Fast Motion Playback (compatible with DVD, CD, DTS-CD, WMA, MP3/JPEG discs)	7
4. Multispeed Slow motion playback (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)	7
5. Freeze Frame and Frame Advance (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)	8
6. Using the Repeat Feature (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)	8
7. Using the Display Feature (compatible with DVD, CD, CD+G, DTS-CD, WMA, MP3/JPEG discs)	8
8. Using the Search Feature (compatible with DVD, CD, DTS-CD, HD-CD discs)	8
9. Using the Browse / Scan / Index feature (compatible with discs; the scan feature is also compatible with CD, CD+G, DTS-CD, HD-CD discs)	9
10. Changing the Soundtrack (compatible with CD, CD+G, HD-CD, WMA, MP3/JPEG discs)	9
11. Changing the Audio Language (compatible with DVD discs)	9
12. Subtitles (compatible with DVD discs)	10
13. Changing the Camera Angle (compatible with DVD discs)	10
14. Mute the Audio Output (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)	10
15. Zoom In the Video Image (compatible with DVD, JPEG discs)	10
16. Repeat a Specific Segment on the Disc that You Define (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3 discs)	11
17. Volume control (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)	11
Chapter 3 Playing WMA, MP3 and JPEG discs	12
Chapter 4 The Setup Menu System	14
Disc maintenance	21
Specifications	21

Types of Discs Your DVD Player Will Play

Types of Discs	Diameter	Playback Time	Data Format	Remark
DVD	12cm	1 layer: 120min	DVD Format Disc: Compressed Digital Audio Compressed Digital Video (Moving picture)	
		2 layers: 240min		
	8cm	1 layer: 80min		
		2 layers: 180min		
CD	12cm	74min	CD-DA: Digital Audio	
	8cm	20min		
HD-CD	12cm	74min	HD-CD: Digital Audio	
DTS-CD	12cm	74min	DTS-CD: Digital Audio	
MP3/JPEG	12cm	600min	Compressed Digital Video	
WMA	12cm		Compressed Digital Audio	

 
- Note: DVD-R, CD+R, CD-RW discs can be played in this DVD player.

Supporting function of disc


- ★ DVD disc can support many functions, different makers, and different function support. Prevalent marks of a few functions as follows:



NTSC zone code & TV system



Picture scale mode

 

DOLBY digital surround sound



Parental lock



Numbers of sound language



View angle



Numbers of subtitle language

 


Close caption
(Only NTSC)

Remote Controller:

ENGLISH

1. SUBTITLE
2. OPEN/CLOSE
3. NUMERIC KEYS
4. PBC
5. STEP
6. PROGRAM
7. SLOW
8. SETUP
9. CURSOR CONTROL
/ENTER
10. TITLE
11. PAUSE
12. MUTE
13. FR, FF
14. PREV, NEXT
15. STOP
16. MENU
17. ZOOM
18. A-B
19. VOL+, VOL-
20. REPEAT
21. OSD
22. GOTO
23. L/R
24. RETURN
25. S-VIDEO /
INTERLACE-Y U V/
P-SCAN Y Pb Pr
26. LANGUAGE
27. ANGLE
28. STAND-BY

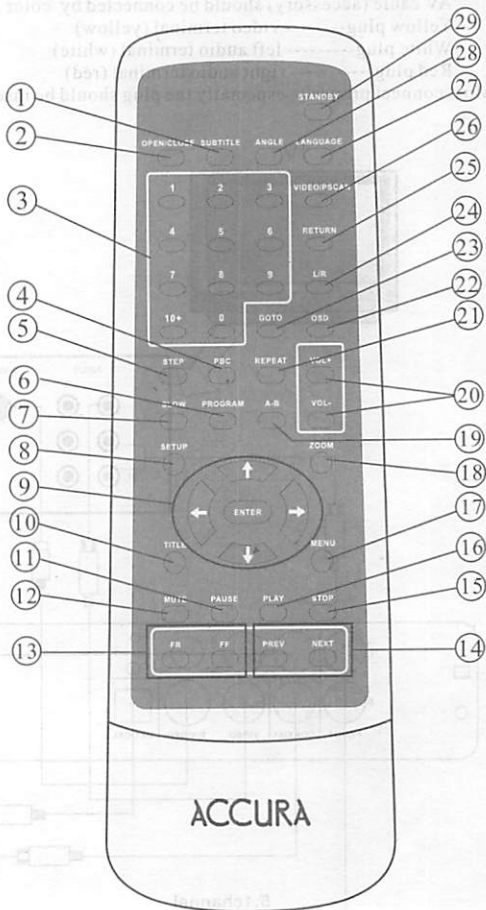

systems connection

- 1) Before connecting, make sure to turn off power of all apparatus.
- 2) After finishing connection, turn on the power again.

 
AV cable (accessory) should be connected by color .

Yellow plug----- video terminal (yellow)

White plug----- left audio terminal (white)

Red plug----- right audio terminal (red)

Must connect properly, especially the plug should be inserted to the bottom.

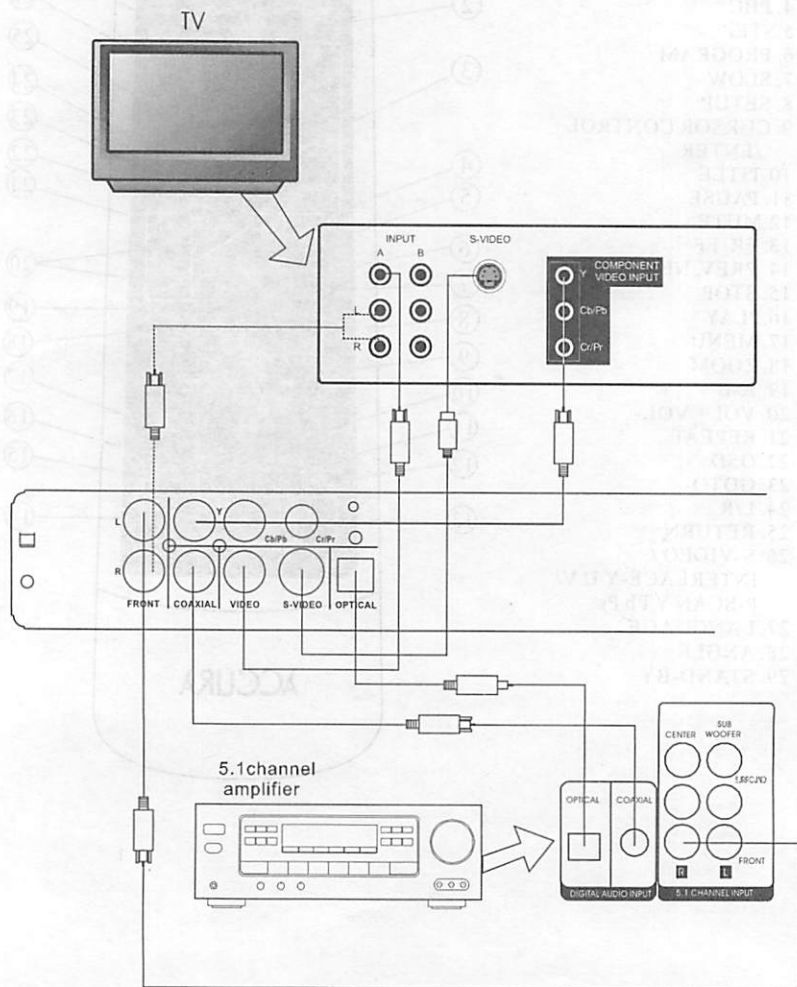

1. Turn On the TV and Your DVD Player

Press the **STANDBY** button on the player or the remote controller, and "Read" appears on the TV screen. If there hasn't a disc in the DVD player, "No disc" will be displayed on both the screen.

2. Place A Disc

Press the **Open / Close** button on the remote controller or the front of the DVD player, and **Open** appears on the screen. Then Place a disc gently into the tray with the disc's label facing up (double-sided discs have content on both sides, so you can place either side up), and press the **Open / Close** button again to close the disc tray, "Close" appears and the player starts to read. Then the disc starts playing automatically. (Note: Of some certain type discs, after reading out the type, the **Play** or **Enter** button should be pressed to start playing.)

3. Play

The contents of each disc menu vary according to how the disc was authored and what features are included. The disc menu will be turned on for you to select, when **Menu** button pressed. Also play and pause can be switched with the **Pause** button on the remote. Moreover, such as menu play, title play, sequence play etc., These different play modes are offered.

a) Menu Play (compatible with DVD discs)

I. Press Menu Button

- TV screen displays the DVD Root Menu when a DVD disc is loaded.

II. When a DVD disc is loaded, you can press **Arrow** buttons to highlight the menu item you want to choose.

III. Press **Enter** or **Play** button, you can begin play with the highlighted.

IV. Return when playing: When a DVD disc is playing, press **Menu** button, and you can return to Root Menu.

V. Stop

- 1) When you press **Stop** button for the first time, the player turns into quasi stop state. At the same time the OSD appears **Quasi Stop**. To begin the title over, press **Stop** twice.
 - 2) In quasi stop state, the player remembers where you stopped, when you start playing the disc again, the DVD player picked up where you left off.
 - 3) In stop state, when you press **Play**, the player enters sequence playback mode.
- For the disc protection, before you press **Open / Close** button to eject the disc tray when playing, please press **Stop** button at first. After taking out the disc, press **Open / Close** again to close the tray.
 - If you're not going to use the DVD player for a long time, be sure to remove the electric plug.

b) Title Play (compatible with DVD discs only)

I. During DVD playback, press **Title** button to display the DVD title content.

II. Press the **Arrow** buttons to highlight the title you want to choose, and press **Enter**; Also you can press numeric buttons to choose.

 
III. The DVD player begins with the chapter 1 of the chosen title.

c) **Program Play (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)**


The Program Playback option allows you to enter the order in which you want chapters or tracks to play, maximum to 16.

Program Menu:

DVD, WMA, MP3/JPEG discs:

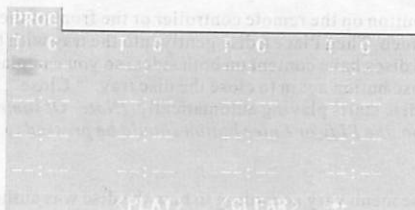

CD, CD+G, HD-CD, DTS-CD discs:

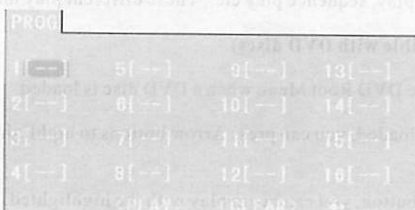 

If PBC is on, this operation will turn PBC off while the chapters / tracks plays in programmed order.

- According to the highlight, use the Numeric buttons to enter the chapters / tracks in the order you want them to play. Then press Play or use Arrow buttons to highlight the PLAY item and press Enter. The chapters / tracks will play in the programmed order.
You can program maximum 16 titles / chapters / tracks.
- According to the Direction Indicator on the menu, you can press Arrow buttons to highlight where you want to enter.
- During Program Playback, if Program button pressed, the programmed order and the contents will be displayed on the screen, and the Program Playback will be stopped; Also you can press Stop and Play to resume normal playback.

Notes:

- To clear the programmed order, use Arrow buttons to highlight the CLEAR item, then press Enter.
- To modify the programmed order, use Arrow buttons to highlight the modifying item and enter the new chapter / track you want to program directly.

Chapter 2 Additional Operation

1. Selecting Tracks (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)

- a) When playing a DVD disc, press Numeric buttons on the menu or title page to select tracks; During DVD playback, you can input desired title number directly.
- b) As for CD, CD+G, HD-CD, DTS-CD discs, press Numeric buttons directly to select tracks.
- c) when playing wma, mp3 / jpeg discs, press numeric buttons to select different tracks on current track list.

Notes: To select tracks from 1 to 10, press corresponding Numeric buttons (1-9, 10)

To select tracks above 10, press 10+ button. For example, to select the track 15, press 10+ and 5 button. If the selected track is not available, the input would be invalid.

2. Skipping Tracks (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)

- a) To skip forward to the beginning of the next title / chapter / track on a disc, press Next on the remote or the front of the player.
- b) To skip backward to the beginning of the preceding title / chapter / track on a disc, press Prev on the remote or the front of the player.
- If a DVD disc is loaded, it varies according to how the disc was configured.

3. Multispeed Fast Motion Playback (compatible with DVD, CD, DTS-CD, WMA, MP3 / JPEG discs)

You can search in forward or reverse mode during playback.

- a) Press the FF button on the remote during playback to search through a disc. Press the button again on the remote to search at the next speed. Fast Forward Playback has four speeds: $\times 2$, $\times 4$, $\times 8$, $\times 20$. With each consecutive press of the button, the search speed increases. If you press the button five times, Fast Forward Playback cycles back to normal playback. During DVD playback, when Fast Forward Playback gets to the beginning of the next title / chapter, it resumes normal playback.
- Press Play button to resume normal playback.
- b) Press the FR button on the remote during playback to search through a disc. Press the button again on the remote to search at the next speed. Fast Reverse Playback has four speeds: $\times 2$, $\times 4$, $\times 8$, $\times 20$. With each consecutive press of the button, the search speed increases. If you press the button five times, Fast Reverse Playback cycles back to normal playback. During DVD playback, when Fast Reverse Playback gets to the beginning of the playing title / chapter, it resumes normal playback.
- Press Play button to resume normal playback.

4. Multispeed Slow Motion Playback (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)

Press Slow button when pictures moving, you can enter Slow Motion Playback mode.

Press the Slow button on the remote during playback. Press the button again on the remote to play at the next speed. Slow Motion Playback has six speeds: 1/2, 1/3, 1/4, 1/5, 1/6, 1/7. With each consecutive press of the button, the play speed decreases. If you press the button seven times, Slow Motion Playback cycles back to normal playback. Press Play button to resume normal playback

5. Freeze Frame and Frame Advance (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs).

- a) During CD, CD+G, HD-CD, DTS-CD, WMA or MP3 / JPEG playback, press Pause once to freeze playback; Press the Pause button again or Play button to resume normal playback.
- b) During DVD playback, press Pause once to freeze playback; Press of the Pause button again to advance the picture one frame at a time; Press Play to resume normal playback.

6. Using the Repeat Feature (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)

While a disc is playing, press Repeat button once, and the repeat banner appears to show current repeat mode.

- a) In CD, CD+G, HD-CD, DTS-CD, WMA, or MP3 / JPEG sequence playback mode, press Repeat button again to turn on repeat mode. Press the button again on the remote to turn to the next repeat mode. There are three repeat options: Off, Track Repeat, and Disc Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button four times, repeat mode cycles back to Off.
- b) In DVD playback, press Repeat button again to turn on repeat mode. There are three repeat options: Off, Chapter Repeat, and Title Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button four times, repeat mode cycles back to Off.
- c) In WMA, MP3 / JPEG playback, press Repeat button again to turn on repeat mode. There are four repeat options: Off, Track Repeat, Directory Repeat, and Disc Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button five times, repeat mode cycles back to Off.

7. Using the Display Feature (compatible with DVD, CD, CD+G, DTS-CD, WMA, MP3/JPEG discs)

- a) Loading and playing DVDs (two pages)

Press Display button once to show the first page:

Disc Type, Title * / * (the playing title / total titles), Chapter * / * (the playing chapter / total chapters), Elapsed Time of the Disc.

Press the button again to show the second page:

Language * / * (the serial number of playing language / the amount of optional languages) or Off, Language Type, Audio Type, Subtitle * / * (the serial number of playing subtitle / the amount of optional subtitles) or Off, Angle * / * (the serial number of playing angle / the amount of optional angles) or Off.

Press the button for the third time, the display menu fades out.

- b) Loading and playing CD, CD+G, DTS-CD, HD-CD, WMA, MP3 / JPEG discs

- Press Display button once to show the first page:

Disc Type, Track * / * (the playing track / total tracks), Mute, Repeat Mode, Elapsed Time of the Playing Track .

- Press the button again, the display menu fades out.

8. Using the Search Feature (compatible with DVD, CD, DTS-CD, HD-CD discs)

You can use Search feature to select a title / chapter / track number or go to a specific point in a title. Firstly, press Search (Goto) button on the remote controller to bring up the search menu and enter the edit state; Secondly, press Arrow buttons to highlight the title / chapter / track number or the time option; Thirdly, use Numeric buttons to enter the title / chapter / track you want to play or the elapsed time you want to go to in that title; At last, press Enter button to start playback. For example, entering 01:23:56 will start playback one hour, twenty-three minutes and fifty-six seconds into the title. If the input number is illegal, the error information INVALID KEY will be displayed on the screen.

Notes

- I. This feature does not work in Program Play mode.
- II. If PBC is on, it will turn off automatically when Search Playback starts.
- III. When playing WMA, MP3 / JPEG discs, Search Feature does not work.

9. Using the Browse / Scan / Index feature (compatible with CD, CD+G, DTS-CD, HD-CD discs)

- a). When a CD, CD+G, DTS-CD, or HD-CD disc is loaded, according to the tracks' sequence on the disc, each track plays 15sec.
 - You can select a track to start Scan Playback by press Numeric buttons on the remote.
 - To exit the Scan Playback and resumes normal playback from the scanning track, press the Play button. During normal playback, press Preview button to start Scan Playback from current track (if the track has played for more than 15sec, it will start from the next track)
- b) Press the Root button again, that is to press the button during Browse Playback, the screen displays big pictures instead of thumbnails. According to the tracks' sequence on the disc, each picture plays 15sec.
 - You can select a track to start Index Playback by press Numeric buttons on the remote.
 - To exit the digest and resume normal playback from current track, press the Play button.
- c) During normal playback, press the PBC button to show thumbnails of the currently selected track.
 - If PBC is on, it will turn off automatically when Browse Playback starts.
 - To view the next nine thumbnails, press the Next button to go forward and the Prev button to go to the previous page.
 - To exit the digest and resume normal playback from the current picture, press the Play button.
 - Each thumbnail has a number in the corner. You can select and play a picture by press that number on the remote.
- d) If you stop, press PBC you can browse nine picture for the disc, During normal playback by press root, you can browse the current track nine pictures.

10. Changing the Soundtrack (compatible with CD+G, HD-CD, WMA, MP3/JPEG discs)

Press the L / R button to display current soundtrack.

- a) Press the button can switch soundtracks.
- b) Press the button again on the remote to turn to next soundtrack.

When playing a CD, CD+G, DTS-CD, HD-CD, WMA, or MP3 disc, there are three: Stereo (L/R), L/L, and R/R.

11. Changing the Audio Language (compatible with DVD discs)

During disc playback, press Language on the remote once, and the audio language info banner appears. When a DVD is recorded with multiple soundtracks, you can use the Language feature to temporarily change the audio language (the language of the soundtrack) There are 3 supported languages: English, French, Spanish.

With each consecutive press of the Language button, the audio language switches and the corresponding serial number appears on the screen. For example, Language Icon: [1 English DTS 6CH] or [Off] (the availability of the languages are disc-dependent).

12. Subtitles (compatible with DVD discs)

Press the Subtitle button on the remote once, and the subtitle info banner appears. When a DVD is recorded with subtitles, you can use the Subtitle feature to view the sub-titles on screen. By default, subtitles are off. The info banner will display Subtitle Off. To display subtitles, press the Subtitle button again. The default language with its corresponding serial number will be displayed in the info banner and subtitles will be displayed in that language. There are 3 supported subtitles: English, French, Spanish

With each consecutive press of the Subtitle button, the subtitle switches.

For example, Language Icon: [1 English DTS 6CH] or [Off] (the availability of the subtitles are disc-dependent). To turn subtitles off, press the Subtitle button until Subtitle Off is displayed.

13. Changing the Camera Angle (compatible with DVD discs)

During disc playback, press Angle on the remote once, and the angle icon appears. Some DVDs contain multiple angles of a particular scene or sequence, so you can use the Angle feature to view. Press the Angle button again to go to the next camera angle. If multiple camera angles are available, the Angle icon displays the current angle number and the number of angles available. For example: Angle Icon: [* / *] or [Off] ; 1 / 4 indicates that angle one is being displayed, and there are four different angles available. (This feature is disc-dependent). If no additional camera angles are available, the Invalid Key will be displayed.)

14. Mute the Audio Output (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)

Pressing the Mute button allows you to reduce sound to an inaudible level, and MUTE will be displayed on screen. Press the button again or press the Vol +/- button to return to the normal condition.

Notes:

- When mute, the microphone also has no audio output.
- If the player playback disc without sound, please try to press Mute button to resume.

15. Zoom In the Video Image (compatible with DVD, JPEG discs)

- a) The Zoom Function allows you to enlarge or zoom out the video image and to pan though the image. Press Zoom repeatedly to activate the function and choose the required zoom factor: Zoom 2, Zoom 3, Zoom 4, Zoom 1/2, Zoom 1/3, Zoom 1/4, Zoom Off.

Notes:

- This feature does not work when the Disc Menu appears.

- b) Use the Arrow buttons to pan across the screen when the zoom factor is 2, 3 or 4.

16. Repeat a Specific Segment on the Disc that You Define (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3 discs)

- During the normal or fast motion playback, press the A-B button once, and REPEAT A- will appear on the screen. This indicates the start of the loop to be repeated.
- During the normal or fast motion playback, press A-B again, and REPEAT A-B will appear on the screen. It indicates the end of the loop.
 - Looping will run from set point A to set point B until you turn off Repeat.
- Press A-B again to cancel A-B loop mode.

- When playing a CD disc, you can repeat a specific segment only in one track. When the next track begins, A-B Repeat turns off automatically.
- When playing a DVD disc, you can repeat a specific segment only in one title / chapter.

17. Volume control (compatible with DVD, CD, CD+G, DTS-CD, HD-CD, WMA, MP3/JPEG discs)

 
- You can press the Volume button on the front of TV set or the amplifier to control the sound level.
- Pressing the Vol+ button on the remote allow you to amplify the sound level; Pressing Vol- will reduce the sound level.

Notes:

- During DVD PCM output playback, this feature does not work.





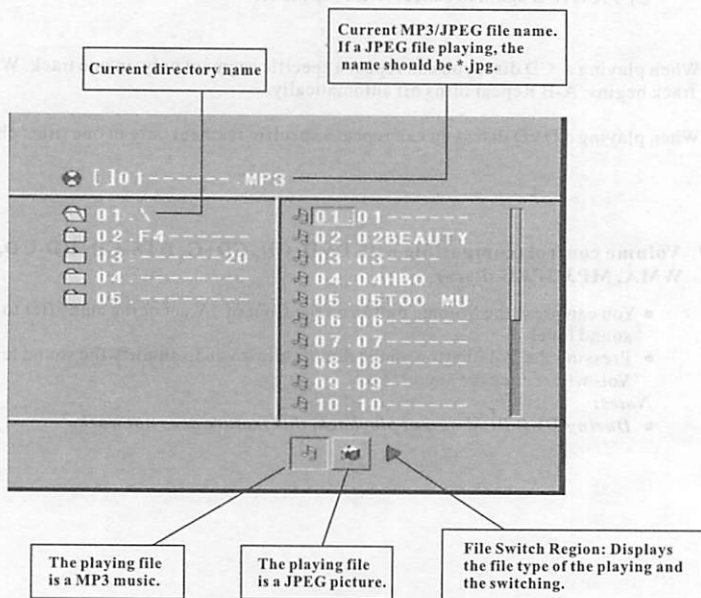


Chapter 3 Playing WMA, MP3 and JPEG discs

Place a MP3 / JPEG disc into the tray, and the player will auto search the directories saved MP3 / JPEG files. After searching, it will auto go to the first directory saved MP3 files (to the disc containing both MP3 and JPEG files; To the disc containing single type of files, it will auto go to the first directory) and play the first song in the directory (01: is highlighted). The screen displays as the picture below:



 Use the Arrow buttons to enter the Directory Region and highlight the desired directory, then the first track under it starts playback; Also you can use the Arrow buttons to enter the File Region and select the file you want to play.

Notes:

- I. Press the Left and Right arrow buttons, you can activate Directory Region, File Region and File Switch Region separately.
- II. The highlight in Directory Region and File Region is shown as the picture above; While it appears a transparent rectangle in File Switch Region.
- III. In File Switch Region, you can press the Left and Right arrow buttons to switch the highlight, then press Enter; the  (Music),  (Play), and  (JPEG) button is illustrated in the above picture.
For example, if a disc with MP3 and JPEG files but without any NES files is loaded, the color of the letter  and  will appear to white and  black. If a MP3 file playing, " turns darker.
- IV. To the disc with WMA, MP3 and JPEG files, when playing a JPEG picture, press the Return button to return to JPEG list.

V. You can press the Numeric buttons to select the file you want to play. For example, if you desire the 15th track in current list, press the 10+ button once, then press 5, the 15th starts playback.

Notes: When playing a disc with MP3 files, video cannot be output while only digital audio can.

VI. When playing JPEG pictures, press the Program button to choose the pictures switched mode. There are 17 switch modes; Press Program repeatedly to activate the function and choose the required switch mode: Spread from Up to Down, Spread from Down to Left, Spread from Left to Right, Spread from Right to Left, Spread from Left Up to Right Down, Spread from Right Up to Left Down, Spread Left Down to Right Up, Spread from Right Down to Left Up, Spread from Center to Up / Down, Fold from Up / Down to Center, Fold from Left / Right to Center, Horizontal Shutter, Vertical Shutter, Fold from the Corners to the Center, Random Play, Off.

VII. When a picture playing or pausing, press the Arrow buttons to change the display angle:

 
Up: flip vertical

Down: flip horizontal


Left: rotate 90 counter-clockwise

Right: rotate 90 clockwise

VIII. When a picture playing or pausing, Please press STOP button and then press PBC button, the screen displays small pictures. Up to 6 small pictures are displayed per screen. To view the next 6 pictures, press the Next button to go forward and the Prev button to go to the previous page. You can also select and play a picture in full screen by press that number on the remote.

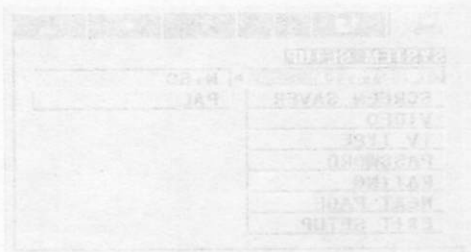

 
SCREEN SAVED
If the screen saver is on, when your DVD player is in Stop, Open, or the Disc state, or there is a blank screen for more than 60sec, the screen saver will be displayed. This feature can protect the screen from damage.
ON: Choose this setting to activate the screen saver.
OFF: Choose this setting to cancel the screen saver.
The default setting is ON.

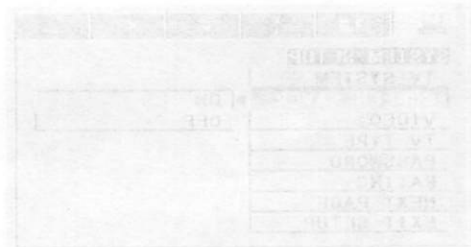

Chapter 4 The Setup Menu System

1. General Steps of Setup Menu

 - a) Press the Setup button, the main setup menu appears.
 - When the main menu displayed, the DVD system will auto pause.

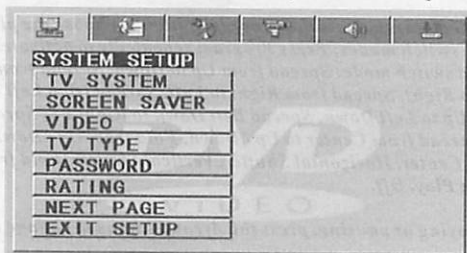

2. Setup Items Introduction

a) SYSTEM SETUP

 
The system setup options are illustrated below:

TV SYSTEM

According to the Color System of the TV, you can choose the TV System.

NTSC: Choose this settings if your DVD player is connected to a NTSC TV.

PAL: Choose this settings if your DVD player is connected to a PAL TV.

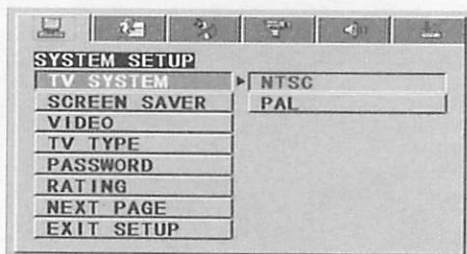


SCREEN SAVER

If the screen saver is on, when your DVD player is in Stop, Open, or No Disc state, or there is a frame frozen for more than 60sec, the screen saver will be displayed. This feature can protect the screen from damage.

ON: Choose this setting to activate the screen saver.

OFF: Choose this setting to cancel the screen saver

 The default setting is ON.

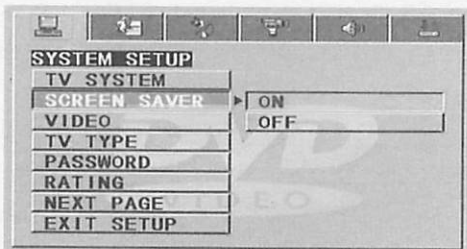


VIDEO

S-VIDEO: Choose this setting if your DVD player is connected to the TV with S-VIDEO cable.

Interlace-YUV: Choose this setting if your DVD player is connected to the TV with Y Cb Cr video cable.

 P-SCAN(Y Pb Pr): Choose this setting if your DVD player is connected to the TV with Y Pb Pr video cable.

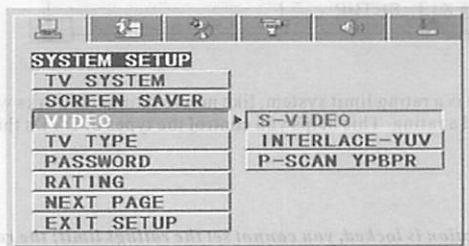

TV TYPE

16:9 (Wide Screen): Choose this setting if your DVD player is connected to a wide screen TV. If you choose this setting and you don't have a wide screen TV, the images on the screen may appear distorted due to vertical compression.


4:3 LB (Letter Box): Choosing this setting if your DVD player is connected to a normal ratio TV. You'll see the movies in their original aspect ratio (height-to-width ratio). You'll see the entire frame of the movie, but it will take up a smaller portion of the screen vertically.

The movie might appear with black bars at the top and bottom of the screen.

4:3 PS (Pan & Scan): Choosing this setting if your DVD player is connected to a normal ratio TV. You can fill the movie to the entire screen of your TV. This might mean that parts of the picture (the left and right edges) won't be seen.


Notes:

- The image display ratio is related to the recorded disc format. Some disc can not display images in the aspect ratio you choose.
- If you play a disc recorded in 4:3 format on a wide screen TV, black bars will appear on the left and right side of the screen.
- You must adjust the screen setting depending on the type of the television you have.

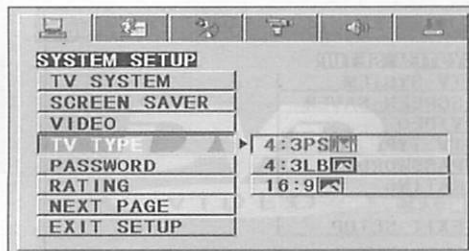 

PASSWORD

 The password option is initialized locked, and you cannot set the ratings limit or change the password. In order for the Ratings feature work, the password mode must be turned on. If you want to set the ratings limit, you will need to enter the default password, which is 0000, then press Enter to confirm. To change the password, you will be prompted for the old password, then be prompted for a new. Enter a 4-digit number (this is your password).

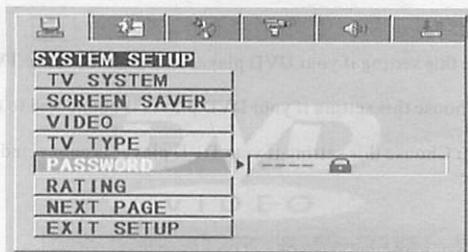


RATING

The Rating feature is a rating limit system, like movie ratings. It works with DVD discs that have been assigned a rating. This helps you control the types of DVDs that your family watches.

Notes:

 If the password option is locked, you cannot set the ratings limit; the rating limit does not work when the password option is unlocked.

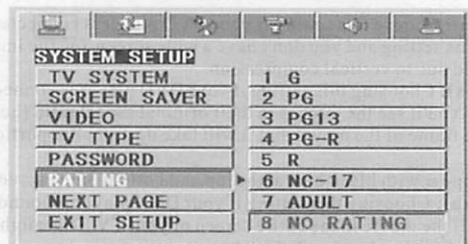


NEXT PAGE

you can choose DEFAULT, RESUME in NEXT PAGE menu.

DEFAULT: Restores the original factory settings.

RESUME: select resume function ONorOFF.

 PREV PAGE: go back to previous menu.

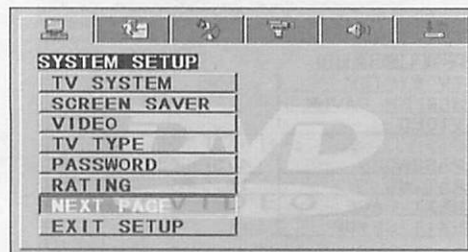


b) LANGUAGE SETUP

The language setup options are illustrated below:

OSD LANGUAGE


Highlight the OSD LANGUAGE option, and press the Arrow buttons to choose the OSD language you prefer. Press Enter to confirm, and it will display OSD in that language;

 There are 2 optional OSD languages: English, French.

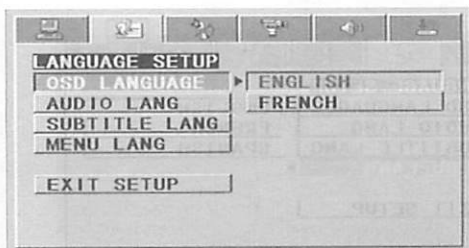


AUDIO LANGUAGE

 Highlight the AUDIO LANG option, and press the Arrow buttons to choose the audio language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will output audio in that language; There are 3 optional audio languages: English, French, Spanish.

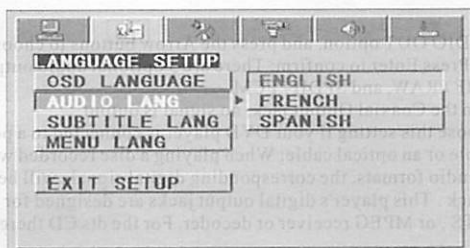

SUBTITLE LANGUAGE

 Highlight the SUBTITLE LANG option, and press the Arrow buttons to choose the subtitle language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will displays subtitles in that language; There are 3 optional audio languages: English, French, Spanish and Off.

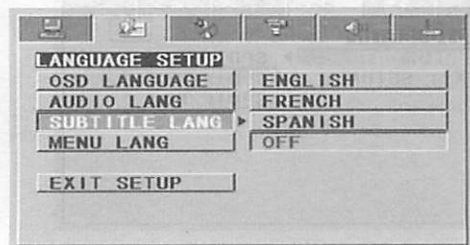


MENU LANGUAGE

Highlight the MENU LANG option, and press the Arrow buttons to choose the menu language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will displays menu in that language; There are 3 optional menu languages: English, French, Spanish.

Notes:

 - If your preferred language isn't available, the disc's default language will be played.

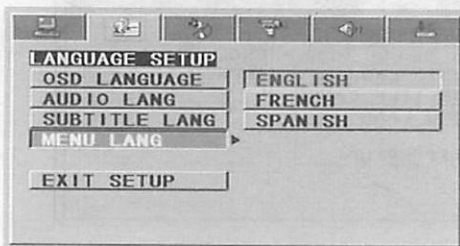

c) AUDIO SETUP

The audio setup options are illustrated below:

 
AUDIO OUT

Highlight the AUDIO OUT option, and press the Arrow buttons to choose the audio output mode you prefer. Press Enter to confirm; There are 3 optional audio output modes: SPDIF/OFF, SPDIF / RAW, and SPDIF/PCM.

SPDIF / OFF: From the Coaxial Output jack, no signal is output.

SPDIF / RAW: Choose this setting if your DVD player is connected to a power amplifier with a coaxial cable or an optical cable; When playing a disc recorded with Dolby Digital, DTS and MPEG audio formats, the corresponding digital signals will be output from the Coaxial Output jack. This player's digital output jacks are designed for a connection to a Dolby Digital, DTS, or MPEG receiver or decoder. For the dts CD there is no RAW output only PCM output

SPDIF / PCM: Choose this setting if your DVD player is connected to a 2-channel digital stereo amplifier; When playing a disc recorded with Dolby Digital and MPEG audio formats, audio signals will be modulated into a 2-channel PCM signal, and it will be output from the Coaxial Output jack.

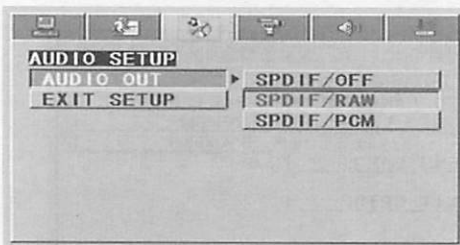


d) VIDEO SETUP


The video setup options are illustrated below:

BRIGHTNESS

 
Use the Up and Down arrow button to move the scroll and adjust the brightness.

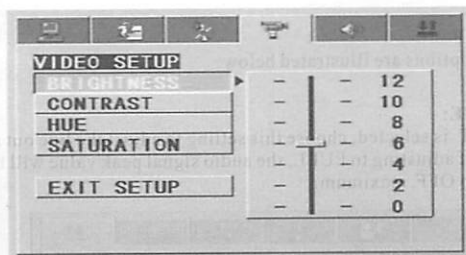**CONTRAST**

 
Use the Up and Down arrow button to move the scroll and adjust the contrast.

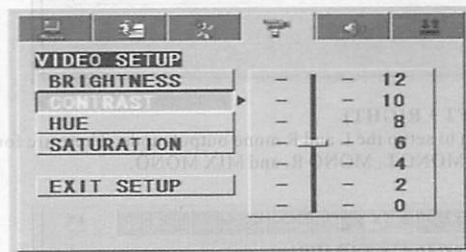**HUE**

 Use the Up and Down arrow button to move the scroll and adjust the hue.

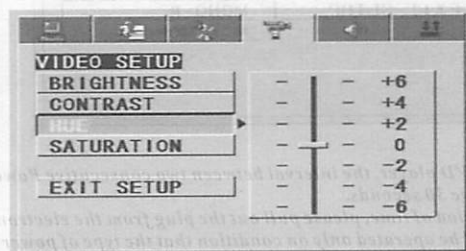**SATURATION**

 Use the Up and Down arrow button to move the scroll and adjust the saturation.

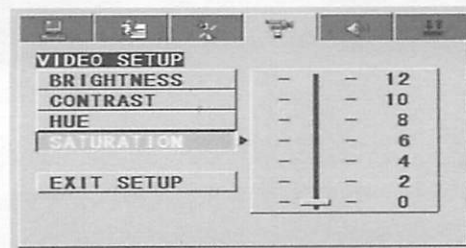


F) DIGITAL SETUP

The audio setup options are illustrated below:


DYNAMIC RANGE:

 When LINE OUT is selected, choose this setting to adjust the line out ratio and get different effect. If adjusting to FULL, the audio signal peak value will be the minimum; while adjusting to OFF, maximum.

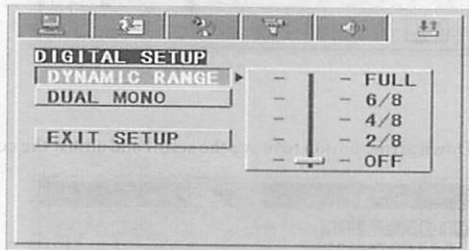

DUAL MONO (LEFT + RIGHT)

 Choose this option to setup the L and R mono output mode; There are four modes in this option: STEREO, MONO L, MONO R, and MIX MONO.

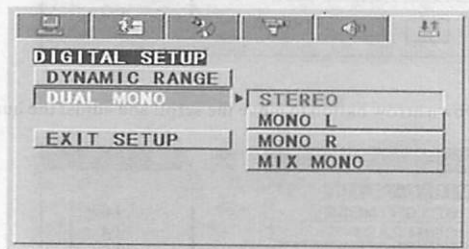

REFERENCE:

- To protect your DVD player, the interval between two consecutive Power button operations must be above 30 seconds.
- No using for a period of time, please pull out the plug from the electronic outlet.
- The player should be operated only on condition that the type of power supply corresponds to the marking label. Otherwise, it doesn't work or even be damaged.
- The player may not be compatible with some encrypted discs.
- If the player stops playback by accident, please power it on again.

Disc maintenance

Disc protection:

- Take the disc both by the hole in the center and the brim;
- No paper shall be adhered to surface of disc neither fingerprint allowed;
- Disc must be kept clean;
- Disc must be cleaned with soft cotton regularly by directing from disc center outside.

Specifications:

Type of video disc: DVD/CD+G(digital AV discs)

MP3/CD-DA(common music laser disc)
CDIFMV(VOD)
Kodak Picture CD

Video/picture: MPEG2

Audio: MPEG2

Signal output: video:1.0Vp-p
Audio:Stereo output 2vp-p

Output interface: HI-HD s-terminal output, video output(CVBS), Coaxial output,
Optical output, Y Cb Cr output, Y Pb Pr output.

Voltage: 120V AC 60Hz

Consuming power: 25W

Frequency response: CD *4Hz--20KHz(EIAT) DVD:4Hz--22KHz(48K)(sampling)
4Hz--44KHz(96K)(sampling)

S/N: >90 db

THD: 0.003%

Accessories: infrared ray remote controller, common 'AAA' battery, user manual.

(No advanced notification shall be occurred regarding changes of design, specifications & tech parameters due to constant product improvement)

Notice:

1. Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
2. This Product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

ACCURA

VIDEO PRODUCT LIMITED WARRANTY

We appreciate your purchase of a ELECTROHOME Video Product. We take pride in the quality of our products and have manufactured your new video product to exacting quality standards. We feel confident that with normal use, it will provide you with satisfactory performance.

ELECTROHOME Video Products are warranted against manufacturing defects in materials and workmanship in normal use for the following periods from the date of purchase by the original retail purchaser or gift recipient in an unused condition. This warranty is conditional upon the unit being installed and used as directed in the instruction manual.

1 YEAR PARTS / 1 YEAR LABOUR / 90 DAYS REMOTE CONTROL

JUTAN INTERNATIONAL LIMITED'S OBLIGATION

JUTAN INTERNATIONAL LIMITED'S obligation under this warranty shall be limited to the repair, including all necessary parts and the cost of shop labour connected therewith, or at our option, the exchange of any Video Product which shows evidence of a manufacturing defect within the warranty period. Replacement parts, furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warrant.

WARRANTY EXCLUSIONS

This warranty is extended to ELECTROHOME Video Products purchased in Canada. This warranty shall not apply to appearance or accessory items including, but not limited to; antennae, cabinets, cabinet parts, knobs, batteries, dust covers, connecting cables. This warranty shall, in addition, not apply to customer adjustments that are covered in the instruction book; damages due to handling, transportation, unpacking, set-up, installation, repair or replacement of parts supplied by other than the JUTAN INTERNATIONAL Service Centre; or any malfunction or failure caused by or resulting from abnormal environmental conditions, improper unauthorized service, improper maintenance, modifications or repair by the consumer, abuse, misuse, neglect, accident, incorrect line voltage, fire, flood, or any other Acts of God. This Video Product is only warranted to the original retail purchaser or gift recipient. This warranty becomes void in the event of commercial or rental use. This warranty becomes void in the event serial numbers are altered, defected or removed.

JUTAN INTERNATIONAL reserves the right to make changes in design or to make additions to or improvements upon this product, without incurring any obligation to install the same on products previously manufactured.

The foregoing is in lieu of all other warranties expressed or implied and JUTAN INTERNATIONAL neither assumes nor authorizes any person to assume for it any other obligation or liability in connection with the sale or service of this product. In no event shall JUTAN INTERNATIONAL dealers be liable for special or consequential damage arising from the use of this product, or for any delay in the performance of this warranty due to cause beyond our control.

The purchaser may have other rights under existing provincial or federal laws, and where any items of this warranty are prohibited by such laws, they are deemed null and void, but the remainder of the warranty shall remain in effect.

CUSTOMER OBLIGATIONS

The dealer's original, dated bill-of-sale should be retained as proof of purchase date and must be presented, together with this warranty card, to the JUTAN INTERNATIONAL Service Centre in Canada, when this product is to be serviced under the provisions of this warranty. Transportation to and from the service centre is the responsibility of the owner. Warranty service is only available in Canada.

HOW TO OBTAIN WARRANTY SERVICE

Should this product require warranty service, you may obtain specific information on how to obtain warranty service by contacting JUTAN INTERNATIONAL LIMITED directly between 9:00AM - 5:00PM, (Toronto time) Monday to Friday.

JUTAN INTERNATIONAL LIMITED
455 Gordon Baker Road, Toronto, Ontario, M2H 4H2
(416) 499-5449 / 499-5450 / 1-800-663-5954